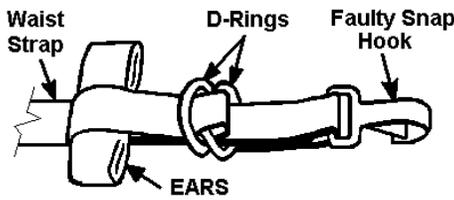
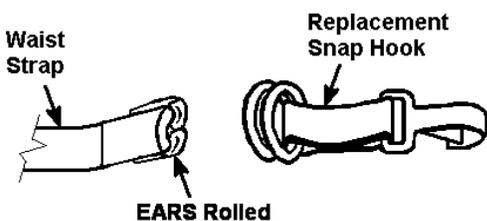
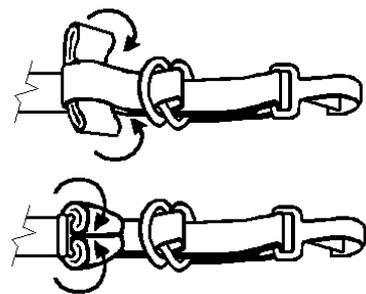

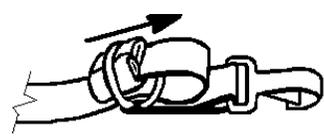

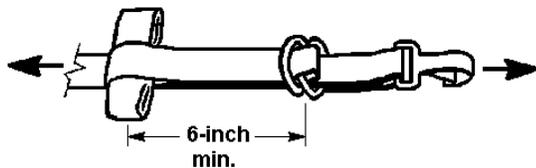


Instructions for Replacing Defective Snap Hook Assembly

| | |
|--|--|
| <p>STEP 1: Place the waist strap assembly on a flat surface with the EARS on top, as shown.</p>  | <p>STEP 5: While still holding the rolled EARS place the replacement snap hook in front of the rolled EARS (it is important to have the snap hook positioned as shown).</p>  |
| <p>STEP 2: Roll both sides of the EARS towards the center, as shown by the arrows.</p>  | <p>STEP 6: Slide the rolled EARS through BOTH D-Rings, as shown.</p>  |
| <p>STEP 3: While holding the rolled EARS pull the end of the waist strap through the first D-Ring, as shown.</p>  | <p>STEP 7: Loop the rolled EARS back over one D-Ring and slide it back through the second D-Ring, as shown.</p>  |
| <p>STEP 4: While holding the rolled EARS pull the end of the waist strap through the two D-Rings, as shown. Discard the defective snap hook assembly.</p>  | <p>STEP 9: Pull the end of the waist strap with EARS away from the D-Rings at least 6 inches and then check that the waist strap does not slip significantly when the snap hook is firmly pulled away from the lifejacket, as shown by arrows.</p>  |